



Quick Installation Guide

- Ensure that the installation and wiring comply with all applicable codes and other application requirements.
- For indoor use only. Do not place in wet or exposed areas.
- Refer all service to qualified service personnel.

Installation

- Move the cabinet to its intended location.
- Install the female end of the A.C. mains line cord (provided in the parts box) with the IEC power connector located on the rear of the cabinet. Install the male end a properly grounded power outlet.
- Zip tie the power cord to the bridge lance to keep it from getting loose when the cabinet is moved.
- Place the cabinet in its final position, taking care to ensure that ventilation openings are not blocked and the cords and cables are not pinched.
- Adjust the four cabinet leg levelers down such that the cabinet is level and does not move or rock. Ensure that the cabinet wheels are raised up from the floor and are not supporting the cabinet.
- Turn the cabinet power switch "ON."

Top Camera Installation

- Remove the access panel from the top of the photo booth via the two bolts.
- Mount the access panel to the bottom side of the camera with the three bolts/nuts/washers provided.
- Make sure to connect the wire connector inside the camera to the matching connector on top of the photo booth, and replace the access panel on top of the photo booth.

Printer Paper Installation

- Unlock, open, and remove the printer access door. Keys are zip-tied to the curtain rod outside the booth.
- Press the "OPEN" button on the front of the printer door. The printer will unlock the door and allow the door to be rotated down into the horizontal position.
 - Ensure that the cabinet is connected to the A.C. power outlet.
 - The cabinet must be "Turned On" in order to load paper into the printer.
- Remove all shipping material from inside the printer.
- Follow the paper and ribbon installation instructions displayed on the inside of the printer door.
 - The paper support reels are located inside the parts box shipped with the cabinet.
 - The ribbon support tray is located inside the parts box shipped with the cabinet.
- Close the door by gently rotating the door up to the vertical position. The printer will then securely lock the door into position.
 - The printer will feed four sheets of paper out from the door when the paper and ribbon are correctly loaded and the door is properly closed.

(See the included **Manufacturer's Printer Manual** for more information and trouble-shooting.)

Configuration

- Open the coin door and press the "TEST" button.
 - Use the up and down buttons to select the appropriate option.
 - Set pricing, location, and other options as required
 - Select "Exit" at the bottom of the menu to return to normal operation.
- (See the full Fun Stop Photos Manual for Menu Navigation and Descriptions online at our webpage www.TeamPlayInc.com or www.FunStopPhotos.com)

Contact Information

- **TEAM PLAY, INC.**

847.952.7533

847.952.7534

Service@TeamPlayInc.com

<http://www.TeamPlayInc.com>

Office Telephone

Office FAX

E-mail

Website

TEAM PLAYTM
WWW.TEAMPLAYINC.COM