



# Combined Ticket Meter

OPTIONAL -- I/O Board Wiring  
to Add One Hard Meter to  
Total Both Ticket Dispensers





## **Fishbowl Frenzy™ Combined Ticket Meter Option**

By factory default, the total number of tickets dispensed (“Tickets Won”) is recorded by the Fishbowl Frenzy™ game software and can be viewed at the “Game Audits” menu. In addition, the two ticket dispensers have built-in outputs which can be connected to two physical meters.

In response to customer interest, following is an optional change which allows a single physical meter (or debit card system) to track the combined total number of tickets dispensed by both ticket dispensers. By sending a combined ticket count to the I/O Board, you can eliminate the need to access the software menu or to add the physical ticket meter counts together, as follows:

- Update your game software by downloading the software update at the Technical Support page for Fishbowl Frenzy at [www.teamplayinc.com](http://www.teamplayinc.com).
- After updating your software, move the CN4-2 Yellow/Green wire on the I/O board to the CN4-4 position. This changes the Coin 2/ Dollar METER 2 to a Ticket Meter.
- Push the connector pin for Pin 2 out of the CN4 housing and insert it back into Pin 4 of the CN4 housing. This will change METER 2 from a currency meter for Coin 2/Bill to a Totalizing Ticket Meter.

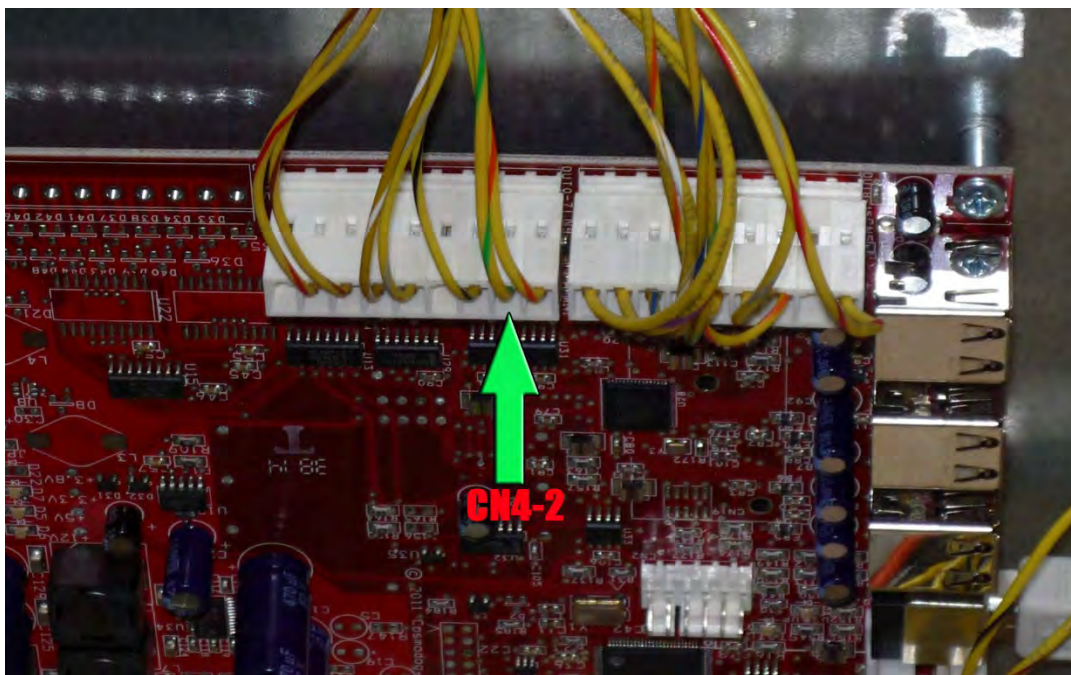

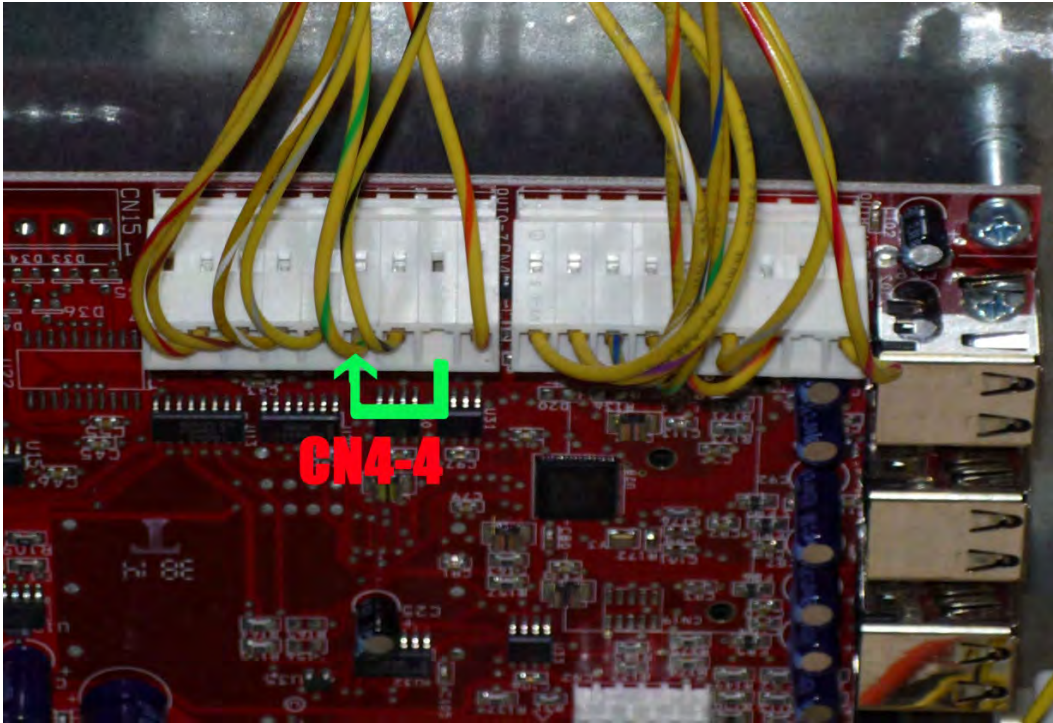

- In the alternative – Add a new wire to the unused Pin 4 of the CN4 housing, and run the new wire to a physical meter or card system ticket input. This will leave the currency meter unchanged and add the new ticket meter output.

If you have any questions, please call 847-952-7533 or email [service@teampplayinc.com](mailto:service@teampplayinc.com).